



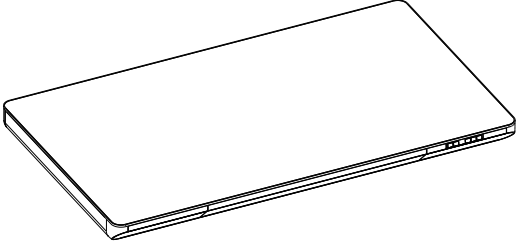


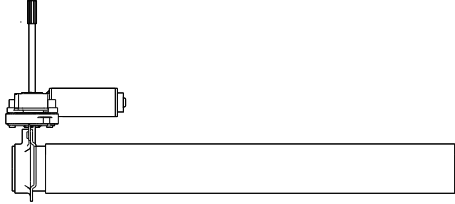

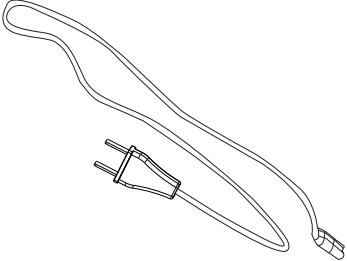


PARTS

	
① x1	② x1
	
③ x1	④ x2
	 <p>This part attached under desktop</p>
⑤ x1	⑥ x1


HARDWARE

 M8*16mm	 M6*15mm	 5x5
Ax8	Bx 10	Cx1

Spare Parts Number-HWPWRCDHEL

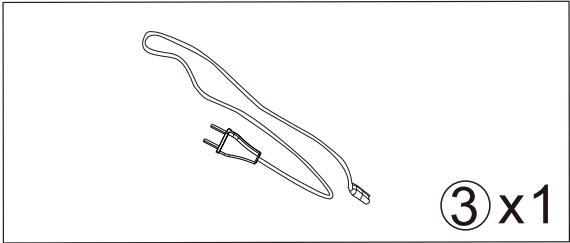

Spare Parts Number-HWPWRCDHEL

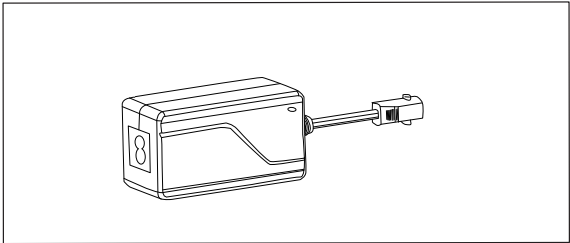


Step 1



Install Legs



Bx2




Cx1

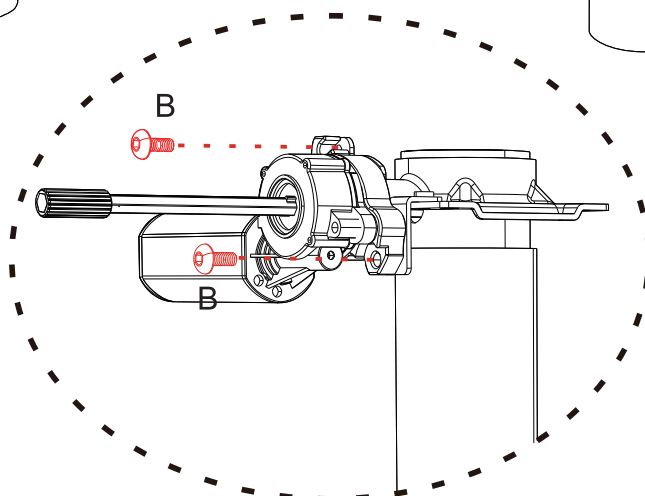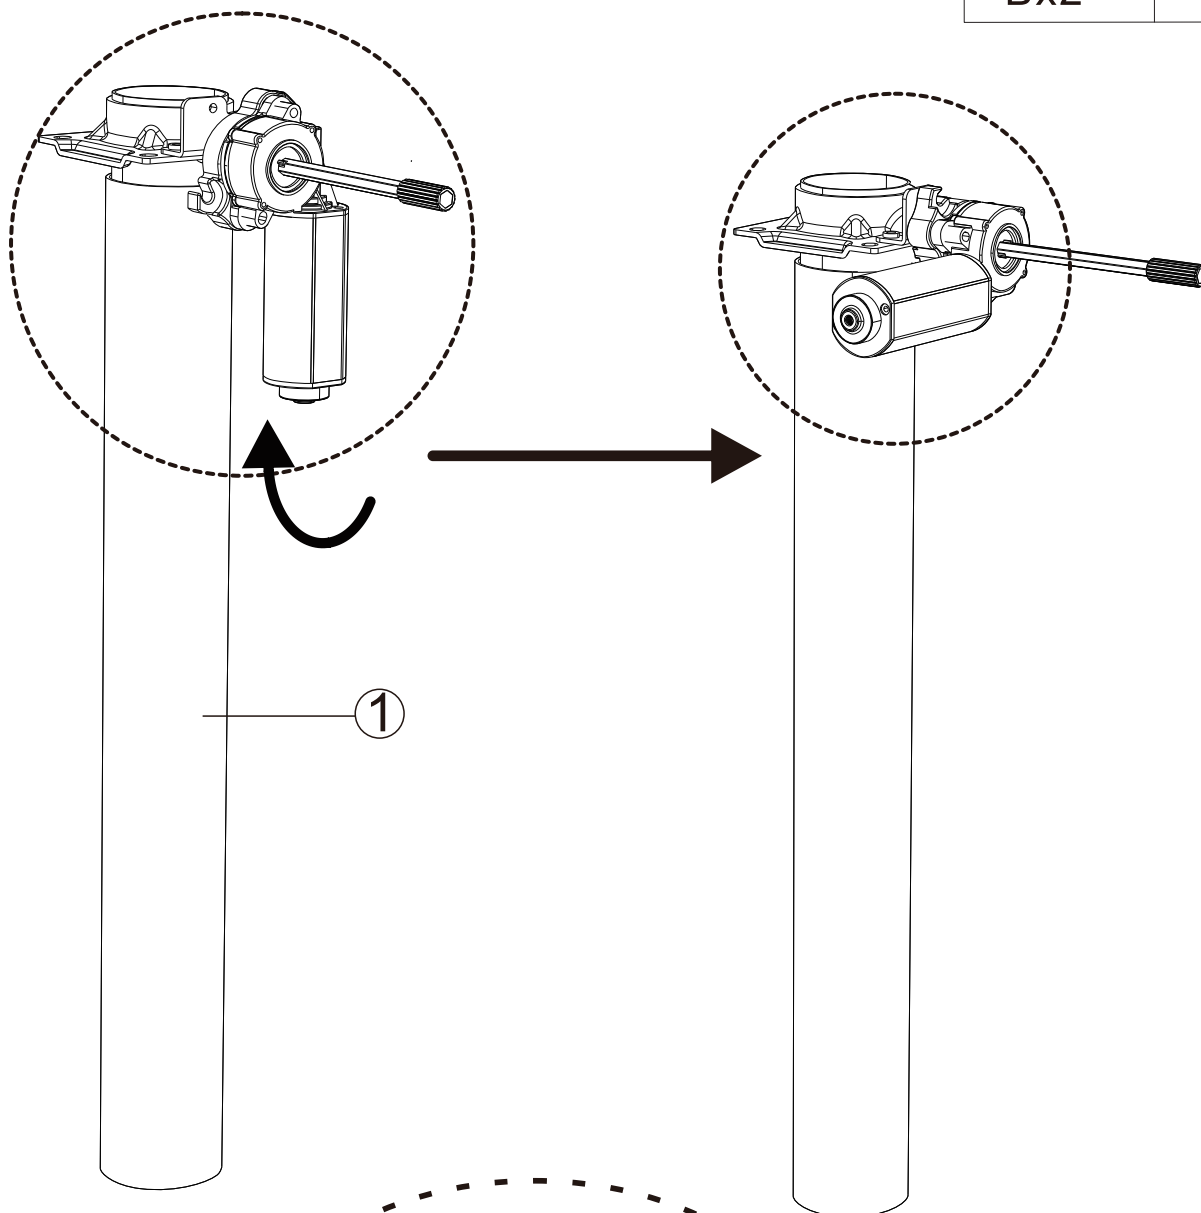


Step 2



Install Legs



Ax8




Cx1


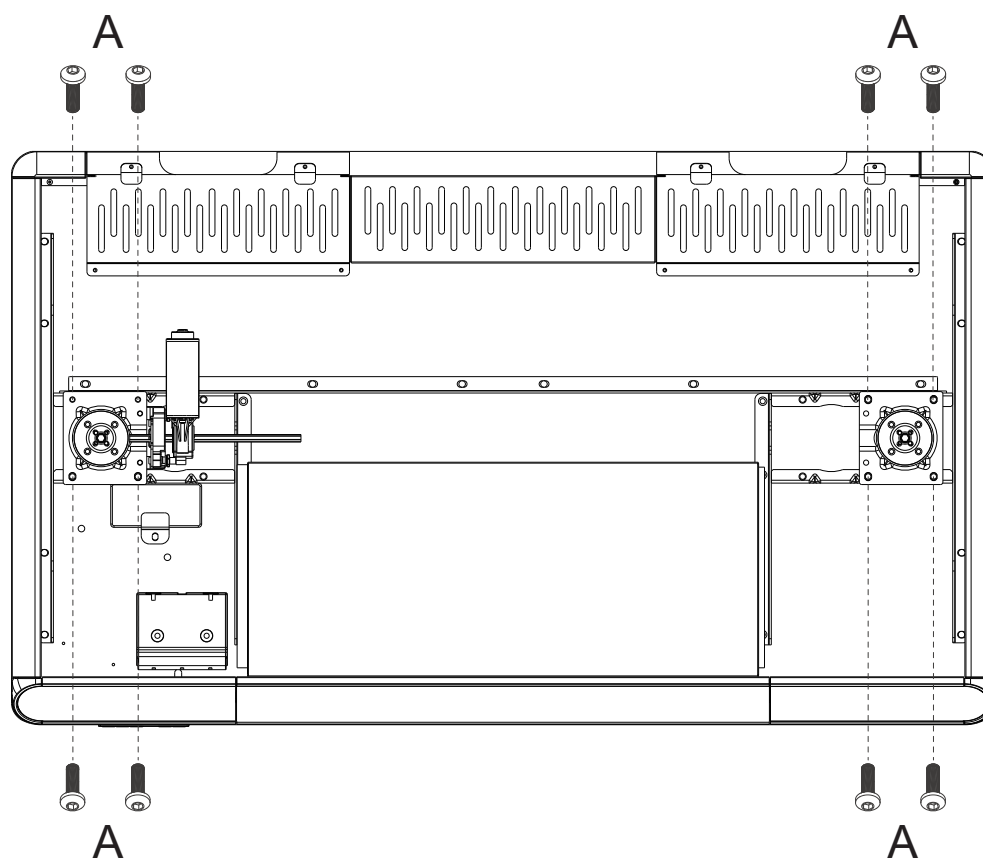
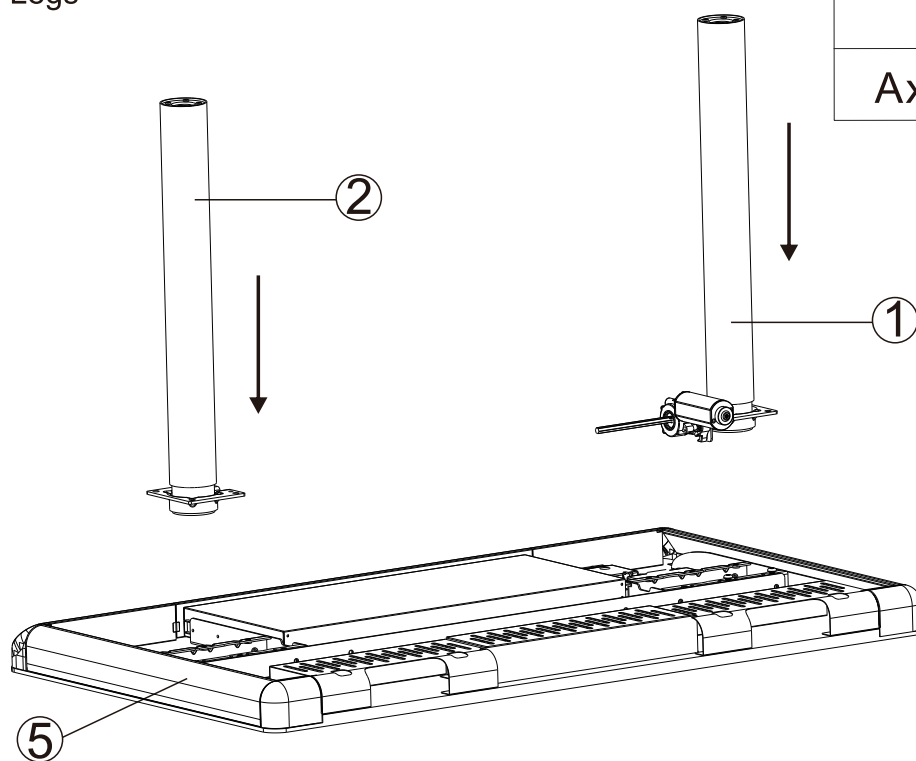


Step 3

Install Hexagon Bar



Cx1

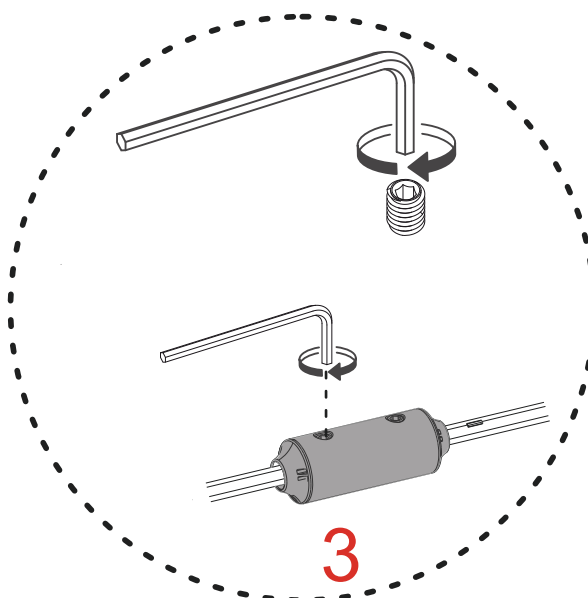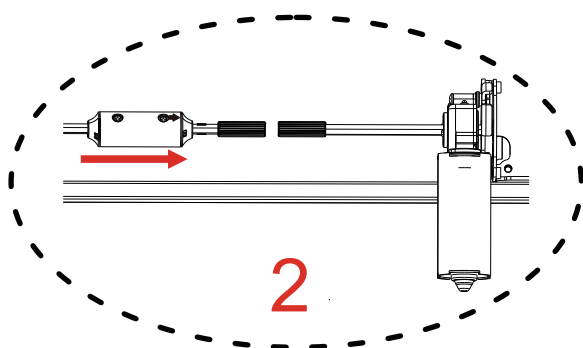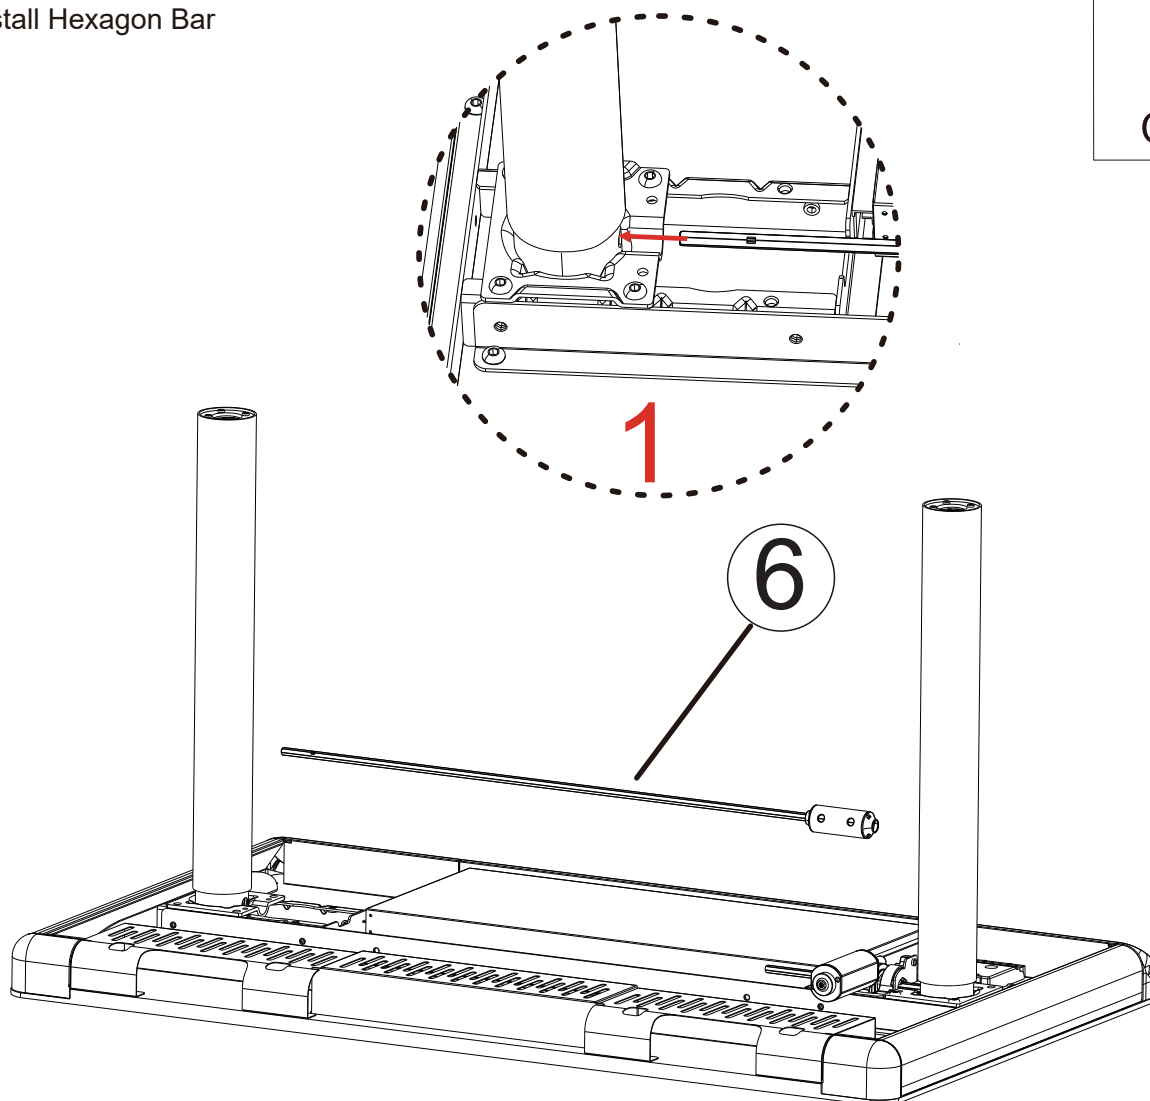


Step 4


Install Feet



Bx8







Cx1

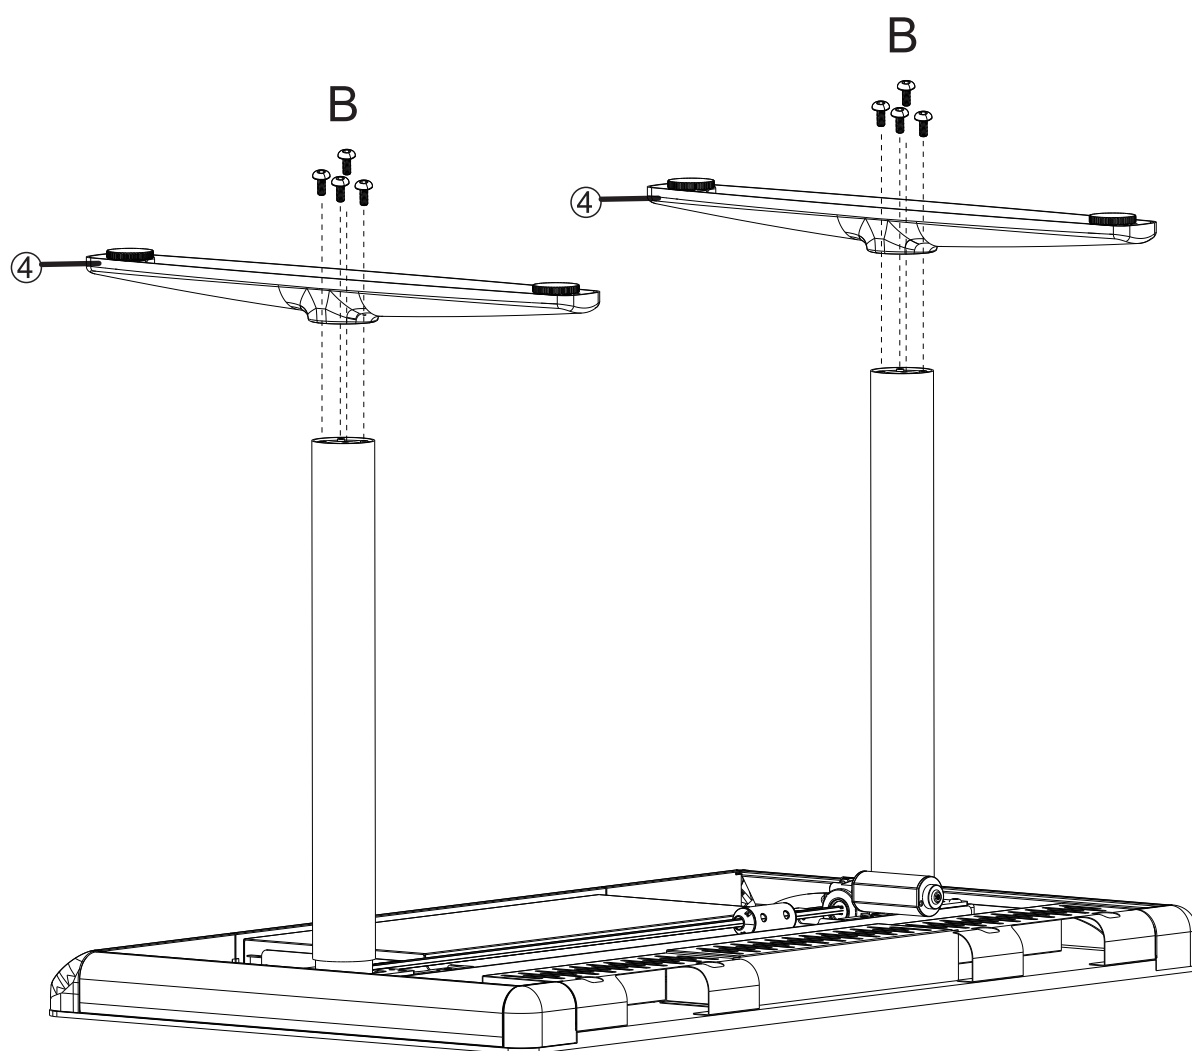


Step 5

Finished

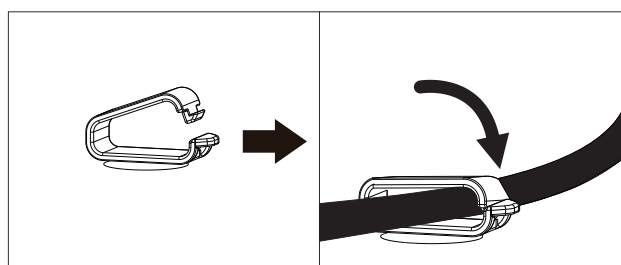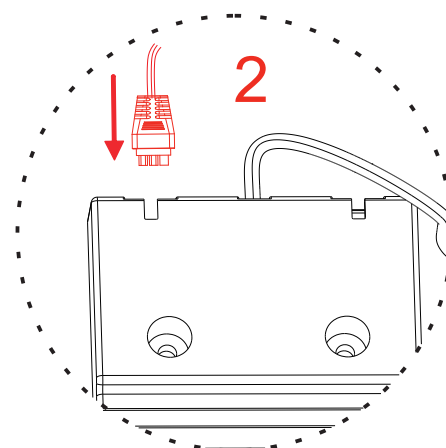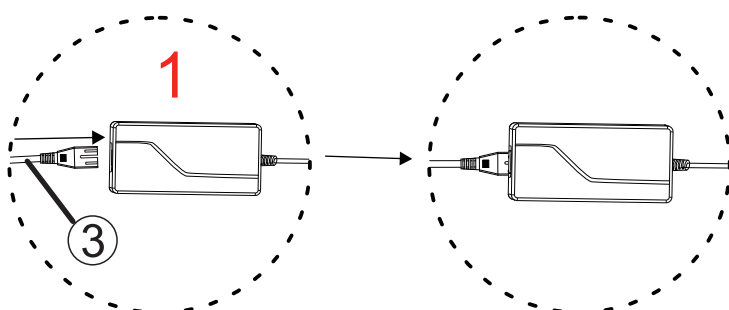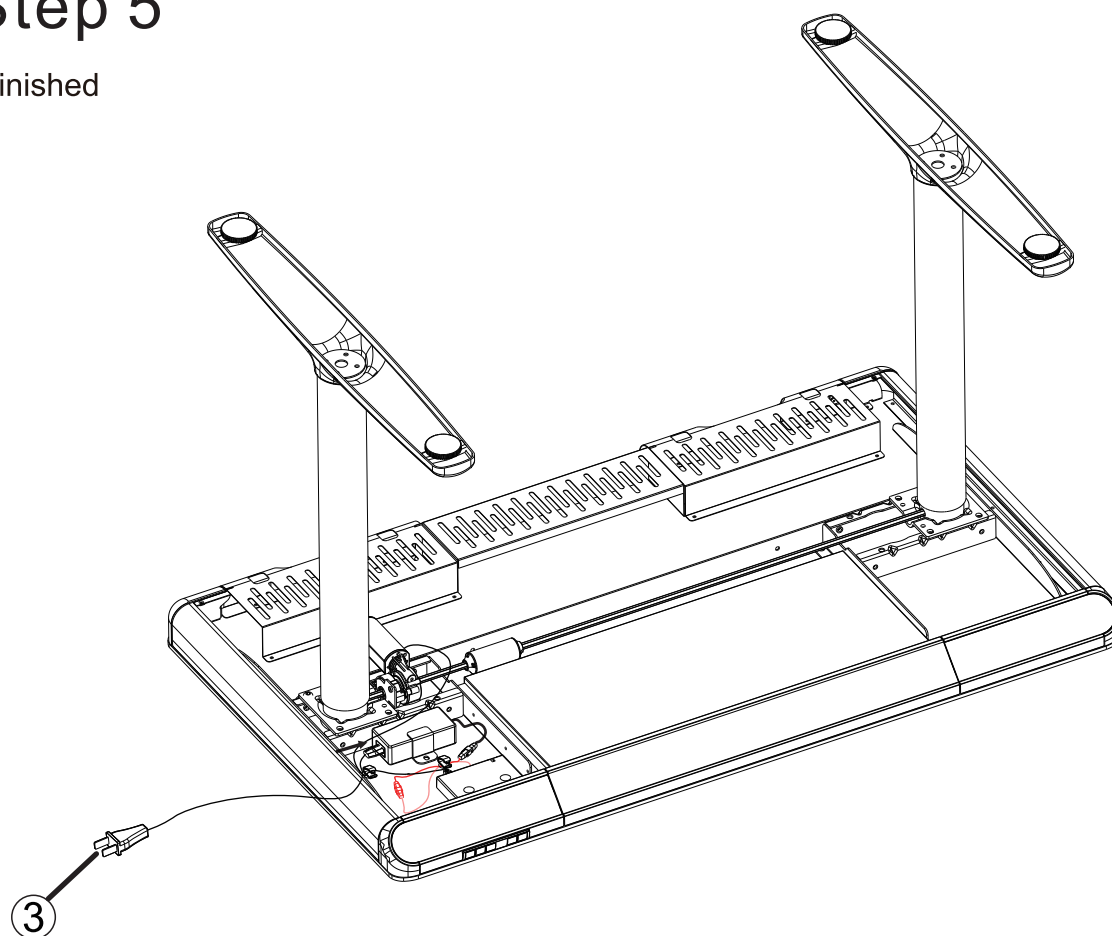

Step6

Finished

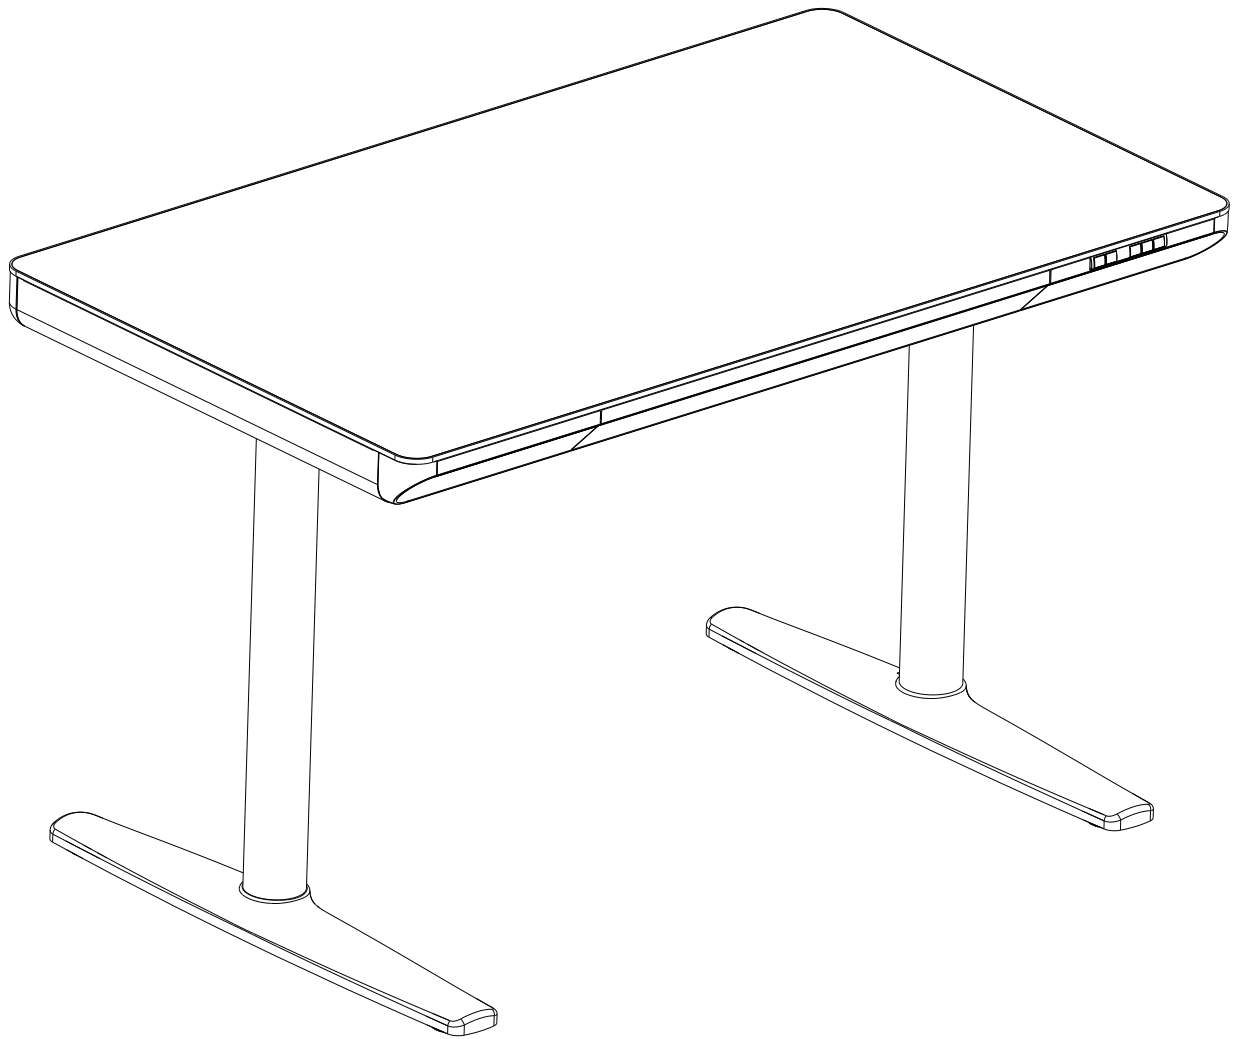

Hand Control



Upward Downward

Neck Sit Memory Stand Memory
Strengthen
mode

Attention

please make sure nothing block the way when table lifting, do not against the table to the wall, and make sure the power cord long enough be on the table

Advice

Set the most comfortable height when you sit down as the sit memory key
Set the most comfortable height when standing, as the stand memory key




The lifting of the table

Press or to control the upward and downward of the table



The setting of memory keys


When Standby,
Press for 3s or above, set the height of now as sit memory key's height;
Press for 3s or above, set the height of now as stand memory key's height

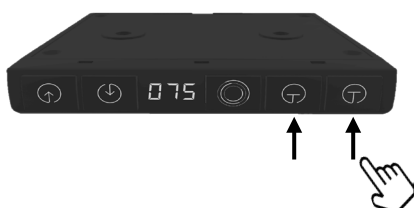

Usage of Memory Keys

When Standby ,
Press shortly, and the table will lift to the sit memory height you set
Press: shortly, and the table will lift to the stand memory height you set

The system can stop by pressing any key in the process of moving to the memory position.

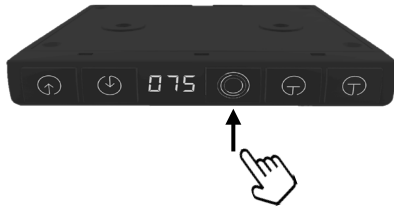


Neck Strengthen mode

Function

When turned on,
Rise 12 cm in 3 minutes, stop for 2 minutes, and then,
Drop 12 cm in 3 minutes, stop for 2 minutes, and repeat.

Operation

In a stationary state,

1. On: Short press  to release and the backlit breathing light will turn on.
2. Off:
 - a. No other operation, automatic shutdown after 1 hour.
 - b. Operate other buttons, turn off by default, the backlit breathing light goes out.

Reset operation



Long press the down button for more than 5 seconds,
The screen shows rES, the sit-stand table starts to run down to the end
and bounces back to a certain height,
at this time, the screen shows the current height,
and the reset is completed.



During the reset process, pressing any button will terminate the reset.
The reset operation needs to be restarted;

Troubleshooting Guide



Before performing maintenance on your desk, be sure to disconnect the power cord from the power source!

Error Code	Phenomenon	Causes	Solutions
E02	The table rises a little and immediately goes down a short distance, or goes down a little and then goes up a short distance.	During the up and down movement of the lifting table, the table is subject to collision or the table is tilted.	Make sure there are no obstacles in the sit-stand desk running space.
Hot	After a period of continuous rise and fall, the table cannot be raised or lowered.	The standing desk has been running continuously for more than 2 minutes, triggering overheating protection.	Wait for 18 minutes to automatically release the device
E10	The table cannot be raised or lowered.	1. Abnormal motor connection. 2. Abnormal motor.	After a power outage, ensure that the motor and hand control are connected reliably. Then power back on for a reset operation.
E20	The table stops rising and falling, and then can only move in the other direction.	1. The lifting table runs upward, indicating that the weight on the table is overweight. 2. The lifting table runs downward, which means that it falls and hits the bottom.	1. Remove part of the weight on the lifting table. 2. Press and hold the down button for more than 5s to perform the reset operation.
rES	Flashing "rES" on the controller screen	The table needs to be reset.	Press and hold the down button for more than 5 seconds to perform the reset operation.
	None of the above is consistent?		Contact Customer Service